



Venti HEAT-PIPE CPU COOLER


風暴之神熱管散熱器

Installation Manual

EVERCOOL


BUY ON
www.cablematic.com

Parts List / 產品配件

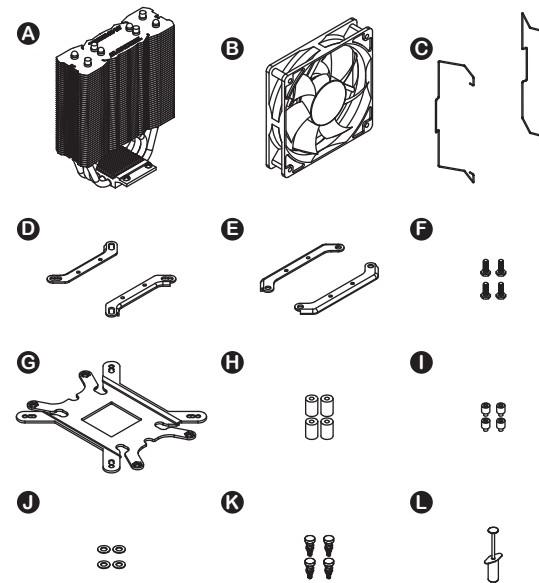


- A CPU Cooler / 散熱器主體x1
- B 12cm Fan / 12公分風扇x1
- C Fan Clip / 風扇扣具x2
- D INTEL Clip / Intel扣具x2
- E AMD Clip / AMD扣具x2
- F Hexagonal screws / 六角螺絲x4
- G Back Plate / 背板x1
- H Nuts / 螺帽x4
- I INTEL LGA 2011 Stand-off / Intel LGA2011 支撐柱x4
- J Washer / 垫片x4
- K Screws / 螺絲x4
- L Thermal grease / 導熱膏x1

Installation Preparation / 安裝注意事項

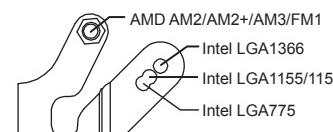



Place the Hexagonal screws and back plate by parallel position.
六角螺絲與背板做平行擺放。

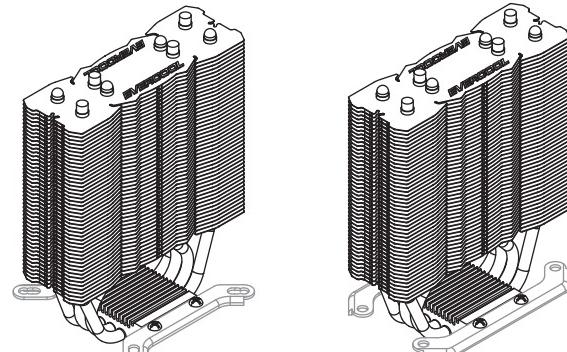

INTEL Clip / INTEL 扣具


AMD Clip / AMD扣具

AMD Installation Preparation / AMD安裝前準備

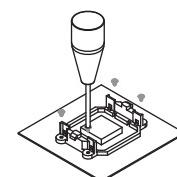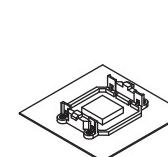


Unload AMD back-plate and clips.
將AMD原本背板與扣具拆下。

Intel socket LGA 2011/1366/1155/1156/775 / Intel LGA 2011/1366/1155/1156/775組裝方式

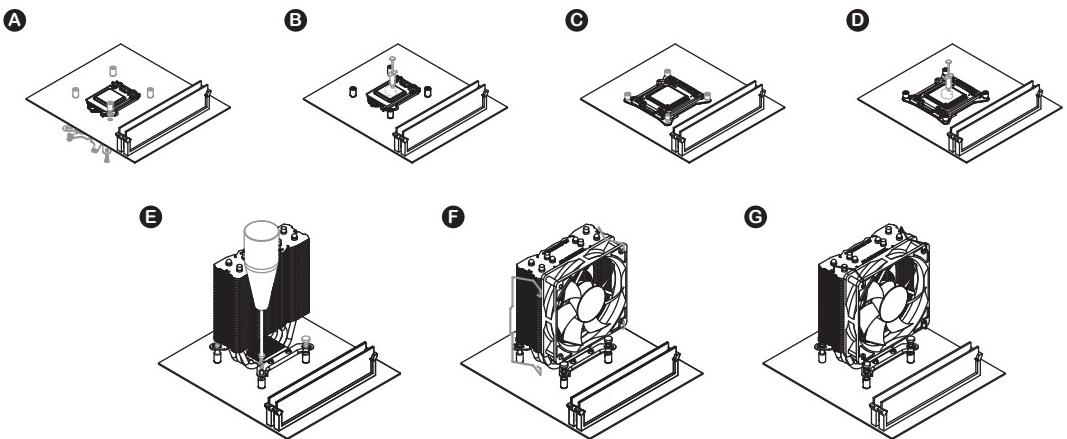

- A Intel installation put Hexagonal screws through the mounting holes of the back plate, place the washers onto the motherboard and screw the nuts. (for LGA 1366/1155/1156/775)
將六角螺絲穿過背板上的Intel孔位，墊片置於主機板上方，再將螺帽鎖上。(安裝於LGA 1366/1155/1156/775)
- B Stick Intel LGA 2011 Stand-offs around the mounting holes of the motherboard. (for LGA 2011)
將INTEL LGA 2011 支撐柱與主機板鎖孔鎖緊。(安裝於LGA 2011)
- C D Apply a thin layer of thermal grease onto the CPU surface.
將導熱膏均勻塗抹在CPU上。
- E Place the cooler onto the central of the CPU surface. Fasten the screws onto the nuts or LGA 2011 stand-offs tightly.
將散熱器對準CPU中央放上，將使用十字起子把螺絲鎖固於螺帽或LGA 2011 支撐柱上，且要鎖固到底。
- F Fasten Fan Clip to the Fan.
使用風扇扣具，將風扇和鰭片做組合。
- G Connect the power cable.
完成後，將風扇的電源接頭裝置主機板上。

AMD_AM2/AM2+/AM3/FM1 Installation / AMD_AM2/AM2+/AM3/FM1組裝方式

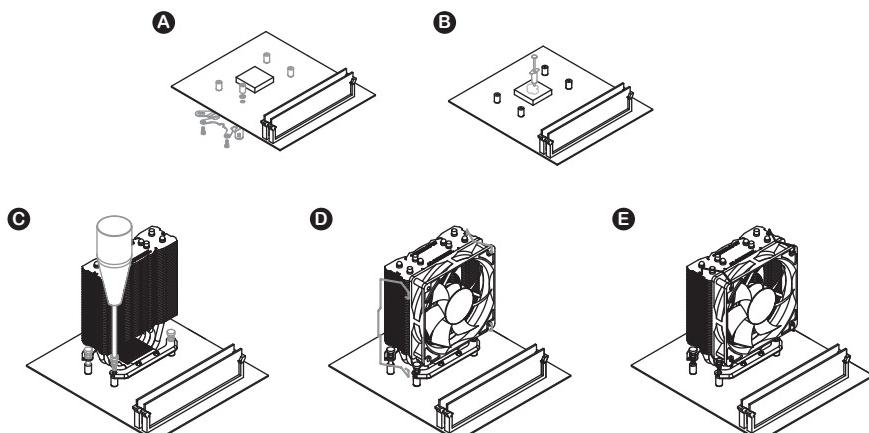

- A AMD Installation put Hexagonal screws through the mounting holes of the back plate, place the washers onto the motherboard and screw the nuts.
將六角螺絲穿過背板上的AMD孔位，墊片置於主機板上方，將螺帽鎖上。
- B Apply a thin layer of thermal grease onto the CPU surface.
將導熱膏均勻塗抹在CPU上。
- C Place the cooler onto the central of the CPU surface. Screw the cooler onto the CPU mounting plate, then tighten up the screws onto the Nuts tightly.
將散熱器對準CPU中央放上，將使用十字起子把螺絲鎖固於螺帽上，建議分兩次鎖固，且要鎖固到底。
- D Fasten Fan Clip to the Fan.
使用風扇扣具，將風扇和鰭片做組合。
- E Connect the power cable.
完成後，將風扇的電源接頭裝置主機板上。